



G.S.M ACTIVATE

2G/3G

GSM Auto Dialler

8 Inputs 1 Output



Model number 2G/3G ad4in1V4 - 8 Inputs

Product Information

Our Auto Dialler is a versatile unit which can be attached to many of your electronic devices in your homes; work, gardens or wherever you may need it. It will alert you using GSM technology by sending you a text message or phone call to your mobile phone or land line. Therefore alerting you immediately to a problem, failure or status change wherever you are in the world!


Our Auto-Dialler is set apart from other models on the market by being on the quad band frequency meaning it can be used worldwide and we frequently ship models all over Europe, USA and Australia with excellent feedback.

The unit is also enclosed in a IP65 rated box which means it is perfectly weathered for outside installation and has passed testing in high temperature and below freezing Conditions.

Specification

- GSM Frequency: Quad band freq 850/900/1800/1900/ 3g only model 2100 Mhz.
- Power Supply Voltage: 9 - 24 volts DC - 1 Amp Max
- Current used in standby mode: 60mA Max
- IP 65 Enclosure rating for outside installation
- 8 Inputs Neg triggered (open and close detection)
- 8 Amp Relay Output
- Micro Simcard
- No land line required
- Dimensions - L150 x W90 x H45mm
- Dimensions PCB Only - L125 x W67mm
- Sim Active Function
- Operating Temperature: -10...+40°C
- Programmed by Text / SMS Message
- Text to test signal strength

INSTRUCTIONS

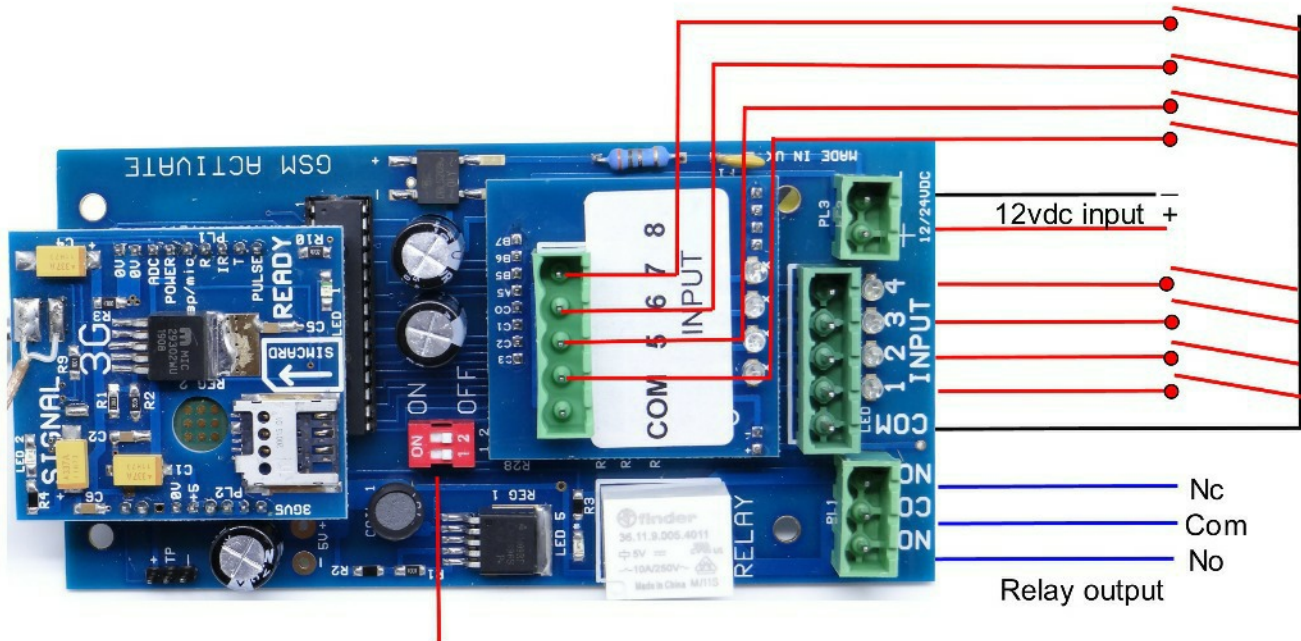

Dipswitch 1 off = 2G
Dipswitch 1 on = 3G

3g Model only

Slide the simcard into the holder making sure that the clipped corner of the simcard lines up with the clipped corner of the simcard holder as picture above.

IMPORTANT - PLEASE READ
PLEASE MAKE SURE YOU DISCONNECT THE POWER WHEN YOU FIT THE SIM CARD THEN PLACE THE SIM CARD WITH THE CLIPPED CORNER FACING IN WARDS. PLEASE SEE PICTURE ABOVE.

SIGNAL STRENGTH:

To help make sure that you place the unit in a suitable position you can text the unit to see how much signal strength the dialler is receiving by texting the command **#SIGNAL#**

The dialler will perform a test on the signal strength.

You will receive a text telling you a signal strength score between 0 up to 30 we strongly recommend that you place the unit where you can receive a signal strength score of at least 10. You will find that with a score of less than 10 the unit will be unreliable.

How to programme contact numbers

After inserting your simcard into the Auto-Dialer turn the unit on and wait until you see the **GREEN READY** LED is on. This will indicate that you have a mobile signal and the unit is ready for use.

You will now need to send a text with the contact number (**maximum 3 contact numbers**)

Note - To avoid confusion we have colour coded the hash (#) and the equals (=) symbols.

Example: (hash) (1 or 2 or 3) (equals) (phone number) (hash)

#1=07123456789# then send this as a text to the simcard number of your unit

#2=07123562349# then send this as a text to the simcard number of your unit

#3=07123871234# then send this as a text to the simcard number of your unit

If you wish to cancel a number follow this example

Example: (hash) (1 or 2 or 3) (equals) (DELETE) (hash)

#1=DELETE# Then send this as a text to the simcard number of your unit

NOTE:

Please send one message at a time and wait for the Auto Dialler to send you back the text Acknowledgement 'NUMBER STORED' before you try to add another number.

Below is a notepad to help you remember the numbers that you have saved to your unit in the event you need to modify or delete in the future.

#1= _____ #

#2= _____ #

#3= _____ #

How to program the SMS text message

You can now change the alarm message for inputs to your own choosing. You can have a separate message for open and closed operations

To change the message send the text command as follows.

#MESS1A=YOUR MESSAGE# The default message is - **input 1 open**

#MESS1B=YOUR MESSAGE# The default message is - **input 1 closed**

“”

“”

“”

#MESS8A=YOUR MESSAGE# The default message is - **input 8 open**

#MESS8B=YOUR MESSAGE# The default message is - **input 8 closed**

This will change the message to “Your Message”

*Note you can use upto 30 characters per message stored

.

Telephone call alerts

The auto dialler can be programmed to send you a telephone call after each text alarm has been sent.

You will receive approximately three ring tones. The unit will then hang up automatically. This is to prevent call charges being incurred.

To set call alerts to ON please send the text message

#CALL=ON#

The unit will reply back “call on”

To disarm call alerts please send the text message.

#CALL=OFF#

If the call function has been set to ON you will receive a text message and shortly after a phone call.

How to Use the GSM Auto Dialler

The Auto Dialler has eight independent input's

Main Board

Input 1 = Terminal 1 connection. (Negatively triggered) pulled to ground

Input 2 = Terminal 2 connection. (Negatively triggered) pulled to ground

Input 3 = Terminal 3 connection. (Negatively triggered) pulled to ground

Input 4 = Terminal 4 connection. (Negatively triggered) pulled to ground

Piggy Back Board

Input 5 = Terminal 5 connection. (Negatively triggered) pulled to ground

Input 6 = Terminal 6 connection. (Negatively triggered) pulled to ground

Input 7 = Terminal 7 connection. (Negatively triggered) pulled to ground

Input 8 = Terminal 8 connection. (Negatively triggered) pulled to ground

Pulled to Ground Input

When the inputs are triggered by pulling to ground the **green led** will flash 4 times to indicate that a trigger has been received and it will send a text message **input closed** to the stored user numbers, it will also call if call function has been enabled

Pulled to High Input or Open Circuit

When a input pin goes from closed to open or low to high state, the **green led** will flash 4 times to indicate that a trigger has been received and it will send a text message **input open** , it will also call if call function has been enabled

***Note all inputs can be triggered independently.**

How to Use the Relay Output

The Auto Dialler has a 8 amp volt free contact relay output which can be used to switch on external electric devices such as lighting, sirens etc.

By texting the unit you can turn the relay ON or OFF. Below are examples on how to do this.

#REL=ON# - This will turn on relay output

#REL=OFF# -This will turn off relay output

After each operation the unit will reply with a status report **RELAY ON/OFF**

It is possible to pulse the output relay for a period of 20 seconds. You will need to send a text as follows.

#PULSE=REL# - This will Pulse the relay for 20 seconds.

To reset the unit back to factory settings you will need to send a text message **#RESET#**

Warning this will reset all of your parameters, only send a reset command when necessary.


The green ready led will flash 8x

Quick Reference

Send Text	Operation	Acknowledgment
#MESS1A=MAX30 CHARACTERS#	Stores a custom message for input 1 Open	Message 1 Stored
#MESS1B=MAX30 CHARACTERS#	Stores a custom message for input 1 Closed	Message 1 Stored
#MESS8A=MAX30 CHARACTERS#	Stores a custom message for input 8 Open	Message 1 Stored
#MESS8B=MAX30 CHARACTERS#	Stores a custom message for input 8 Closed	Message 1 Stored
#SIGNAL#	Gives a Signal Strength Test	Score of 1-30
#1=NUMBER#	Saves Contact Number 1	Number Stored
#2=NUMBER#	Saves Contact Number 2	Number Stored
#3=NUMBER#	Saves Contact Number 3	Number Stored
#1=DELETE#	Deletes Contact Number 1	Number Deleted
#2=DELETE#	Deletes Contact Number 2	Number Deleted
#3=DELETE#	Deletes Contact Number 3	Number Deleted
#STATUS#	Ask for Status Report (Inputs/Relay/Signal)	Status Report
#REL=ON#	Turns On Relay Output	Relay On
#REL=OFF#	Turns Off Relay Output	Relay Off
#PULSE=REL#	Pulses Relay Output for 20 Seconds	Relay Pulse
#RESET#	Resets Device to Factory Settings	Green Light Flashes
#CALL=ON#	Switches Text & Call Alerts on	Call on
#CALL=OFF#	Text Alerts Only	Call off (default)

NOTE -

Please make sure you supply a 9 - 24 volts DC from the battery terminals via a 2 amp fuse (for alarm panel installations)

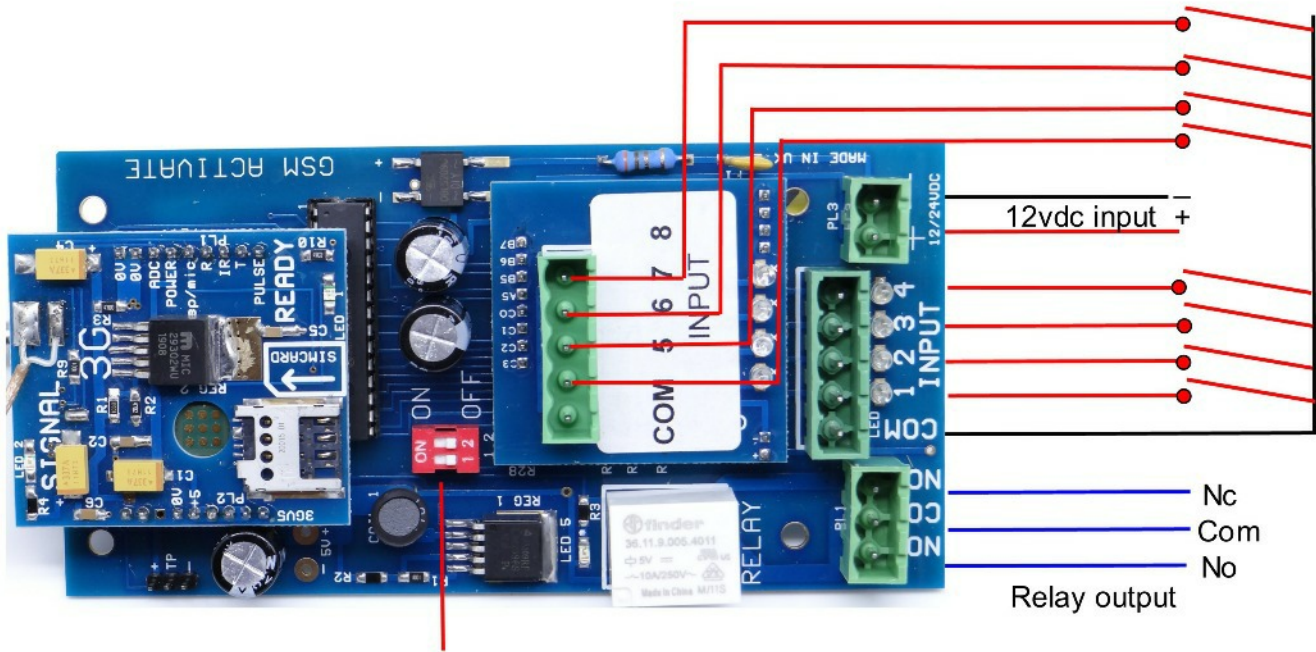

Dipswitch 1 off = 2G
Dipswitch 1 on = 3G

3g Model only

Pulled to Ground Input

When the inputs are triggered by pulling to ground the green led will flash 4 times to indicate that a trigger has been received and it will send a text message **input closed** to the stored user numbers, it will also call if call function has been enabled

Pulled to High Input or Open Circuit

When a input pin goes from closed to open or low to high state, the green led will flash 4 times to indicate that a trigger has been received and it will send a text message **input open** , it will also call if call function has been enabled

***Note all inputs can be triggered independently.**

For more technical support please browse the FAQ's on our website www.gsm-activate.co.uk
Alternatively email our technical support team at technical@gsm-activate.co.uk and we will do our best to reply within 24 hours Monday - Friday.