

G.S.M ACTIVATE

GSM 240V ROLLER SHUTTER OPENER

No More Key Fobs! Open roller shutters with your mobile phone

www.gsm-activate.co.uk



MODEL NUMBER - RS - SWV10

Product Information

The GSM Roller Shutter/Opener incorporates a professional industrial grade GSM engine that receives calls at its SIM number as any ordinary mobile phone. The system operates in the GSM module quad-band frequency 850/900/1800/1900Mhz,

Just to give an example, if your SIM has a phone number 07123456789, that is the number you have to call to open the shutter door. The system has a memory where you will store the numbers of people enabled to open your shutter (up to 200).


When the Roller Shutter/Opener receives a call it will check the calling number and if the number is in the prepared list it will answer the call. You then use your telephone keypad to open and close the roller shutter.

The advantages of this over other systems are that you do not have to leave your car to open the shutter therefore, avoiding weather or safety issues. Furthermore, you do not need to carry a separate remote device or indeed replace it if it were to be lost.

Specification

- Simply Dial the Simcard Number to Open the Shutter Door.
- Phone List for Added Security up to 200 Stored Numbers.
- Text for Signal Strength.
- Call and Use Phone Keypad to Open or Close the Shutter
- Antenna Supplied.
- Sim Active Function
- Dimensions - L150 x W90 x H45mm
- Dimensions - L125 x W67mm
- INPUT 240VAC
- Output Relays are 10 AMP N/O or N/C Volt Free
- Quadband Frequency - 850/900/1800/1900Mhz

INSTRUCTIONS

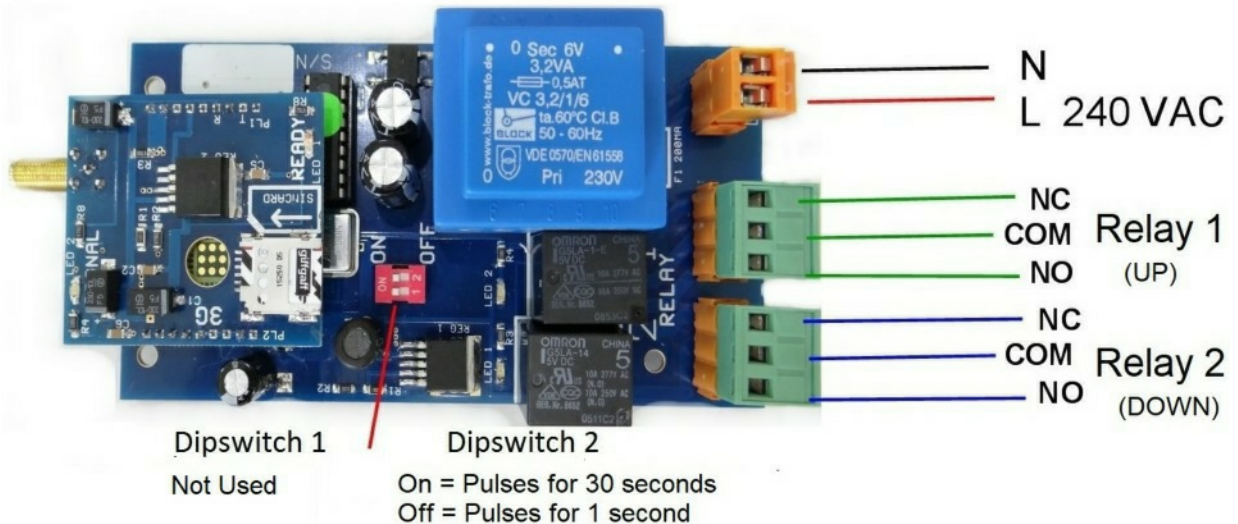

IMPORTANT- PLEASE READ
PLEASE MAKE SURE YOU DISCONNECT THE POWER WHEN YOU FIT THE SIMCARD.
PLACE THE SIMCARD WITH THE CLIPPED CORNER FACING OUT WARDS.
PLEASE SEE PICTURE ABOVE.

Connect 240 volts to the input connector as per figure 1. Once power has been applied the **blue** network LED light will flash once every second. Once a signal has been found the **green** LED will come on and stay on indicating the unit is now ready for use.

- 1: Firstly, please register and put credit on your simcard. Follow the instructions given by your simcard provider
- 2: Insert the simcard into a mobile phone and disable the **voicemail** using the codes below

Vodafone:	call 1210	Tesco	call 2915
T-Mobile:	call 222	O2	call 1760
Orange:	call 4502	Giff Gaff	call 1626
EE	- send the text message command VM OFF to 150		

Signal Strength

To help make sure that you place the unit in a suitable position you can text the unit to see how much signal strength the dialler is receiving by texting the command:

#SIGNAL#

The unit will perform a test on the signal strength.

You will receive a text telling you the signal strength score between 0-30. We strongly recommend that you place the unit where you will receive a score of at least 10. You will find that a signal strength score of less than 10 will make the unit unreliable.

How to program the roller shutter opener.

Text message entry

The unit has a caller ID function so only authorised numbers you store can activate the unit. If caller ID is left OFF anyone phoning the units number can operate the relays.

To turn caller ID on send the text message #ID=ON#

To turn caller ID off send the text message #ID=OFF#

The unit will reply Caller ID On or Caller ID Off

Using Caller ID

To use caller ID you must first enter the telephone numbers that are authorized to use the Roller Shutter Opener.

Once you have followed the steps from Page 3 and have inserted your simcard into the Roller Shutter opener you will receive a steady green light. This indicates that you have a mobile signal.

You will now need to send a text with the contact numbers.

Example: (Hash) (WHL) (Equals) (phone number) (hash)

To avoid confusion we have colour coded the hash (#) and the star (=) symbols.

Example:

#WHL=07123456789# Then send this as a text to the simcard

NOTE

PLEASE NOTE YOU CAN ONLY SEND ONE NUMBER AT A TIME. (Max 200 numbers)
PLEASE SEND THE TEXT MESSAGE AND WAIT FOR THE ROLLER SHUTTER
OPENER TO SEND YOU BACK THE TEXT ACKNOWLEDGEMENT "STORED" BEFORE
YOU TRY TO ADD ANOTHER NUMBER VIA TEXT ENTRY.

If you wish to cancel a number follow this example.

(Hash) (delete) (Equals) (NUMBER) (Hash)

#Delete=07123456789# Deletes the stored number

Please make sure you have credit on your simcard to receive the text acknowledgment. It may take a time to receive a text acknowledgement. This depends upon how busy your telephone network is.

How to Use the Roller Shutter Opener

Depending on your roller shutter control board, you may need a short pulse or a long pulse to operate your roller shutter. You can select the pulse setting by using Dipswitch 2 on the board - refer to picture on Page 3

Dipswitch 2 On = 30 second pulse

Dipswitch 2 Off - 1 second pulse

Short Pulse Relay (1 sec) - (Dipswitch 2 Off)

Using your mobile phone or landline, dial the simcard number within the unit. You will hear two ring tones. The unit will then answer the call. Once the call is open you can use the keypad on your phone to operate the device.

Press key 1 - Relay 1 will pulse for 1 second

Press key 2 - Relay 2 will pulse for 1 second

Pressing key 3 will cancel the command and stop the shutter.

We recommend connecting relay 1 to OPEN/UP and relay 2 to CLOSE/DOWN on your roller shutter control board.

When you press 1 you will hear a fast dialling tone.

When you press 2 you will hear a slower dialling tone.

If you need the shutter to stop, press 1 or 2 will stop the movement (dependent on your roller shutter control board)

Please view the diagram on page 6 for wiring information.

Long Pulse Relay (30 secs) - Deadmans Button (Dipswitch 2 On)

This function is used for roller shutter control boards whereby you need to manually hold the button to open or close the roller shutter. Pressing the button will hold the relay on for 30 seconds. To cancel the command and stop the opening/closing operation you will need to press 3 key on your phone.

Pressing key 1 will cause relay 1 to pulse to open for 30 seconds


Pressing key 2 will cause relay 2 to pulse to close for 30 seconds

Pressing key 3 will cancel the command and stop the shutter.

Factory Reset

To perform a quick factory reset which will delete ALL of your stored numbers please send the text command

Typical wiring for a roller shutter door

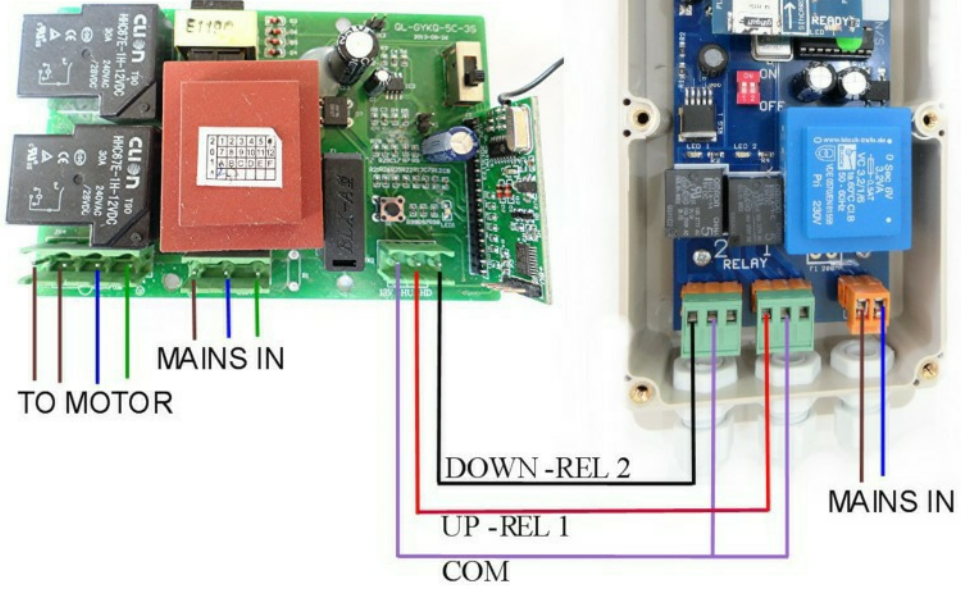

Using your mobile or landline phone, dial the simcard number, you will hear 2 ring tones, the unit will then answer the call. Once the call is open you can then use the keypad on your phone to operate the device.

Pressing key number 1 will cause relay 1 to pulse.

Pressing key number 2 will cause relay 2 to pulse.

Pressing key number 3 will cause relay 1&2 to stop.



QUICK REFERENCE

Send Text	Operation	Acknowledgment
#WHL=NUMBER#	Stores Number to White List	Number Stored
#DEL=NUMBER#	Deletes Number from White List	Number Delete
#RESET#	Clears all numbers from Whie List	
#ID=ON#	Sets Caller ID to On	ID = ON
#ID=OFF#	Sets Caller ID to Off	ID = OFF
#SIGNAL#	Gives a Signal Strength Test	score of 1 - 30

For more technical support please browse the FAQ's on our website www.gsm-activate.co.uk Alternatively email our technical support team at technical@gsm-activate.co.uk and we will do our best to reply within 24 hours Monday - Friday.