




GSM 3G AUTO DIALLER

Remote monitoring & Control using your mobile phone

www.gsm-activate.co.uk

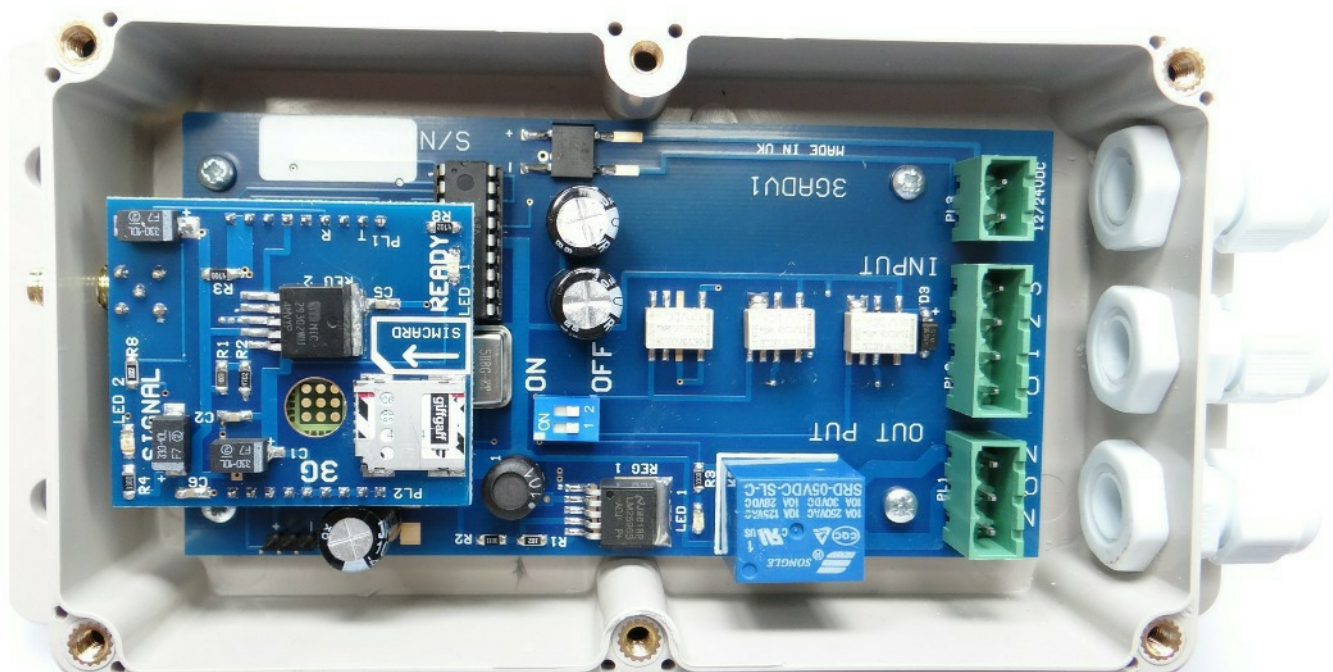

Product Information

Our GSM 3G Auto Dialer is a versatile unit which can be attached to many of your electronic devices in your homes; work, gardens or wherever you may need it. It will alert you using GSM technology by sending you a text message or phone call to your mobile phone or land line. Therefore alerting you immediately to a problem, failure or status change wherever you are in the world!

Our GSM 3G Auto-Dialer is set apart from other models on the market by being on the quad band frequency meaning it can be used worldwide and we frequently ship models all over Europe, USA and Australia with excellent feedback.

The unit is also enclosed in a IP65 rated box which means it is perfectly weathered for outside installation and has passed testing in high temperature and below freezing conditions.

Specification

- GSM Frequency: Quad band fre 850/900/1800/1900/2100 Mhz.
- Power Supply Voltage: 9 - 24 volts DC - 1 Amp Max
- Current used in standby mode: 60mA Max
- IP 65 Enclosure rating for outside installation
- 2 Inputs
- 10 Amp Relay Output
- Micro 2G or 3G Simcard
- No land line required
- Dimensions - L150 x W90 x H45mm
- Dimensions PCB Only - L125 x W67mm
- Sim Active Function
- Operating Temperature: -10...+40°C
- Programmed by Text / SMS Message
- Text for signal strength

INSTRUCTIONS



Dipswitch 1 On = 3G Frequency Dipswitch 2 On - Alarm Relay Mode On
Dipswitch 1 Off = 2G Frequency Dipswitch 2 Off - Alarm Relay Mode Off

Slide the simcard into the holder making sure that the clipped corner of the simcard lines up with the clipped corner of the simcard holder as picture above.

IMPORTANT - PLEASE READ
PLEASE MAKE SURE YOU DISCONNECT THE POWER WHEN YOU FIT THE SIM CARD THEN PLACE THE SIM CARD WITH THE CLIPPED CORNER FACING OUT WARDS. PLEASE SEE PICTURE ABOVE.

SIGNAL STRENGTH:

To help make sure that you place the unit in a suitable position you can text the unit to see how much signal strength the dialler is receiving by texting the command **#SIGNAL#**

The dialler will perform a test on the signal strength.

You will receive a text telling you a signal strength score between 0 up to 30 we strongly recommend that you place the unit where you can receive a signal strength score of at least 10. You will find that with a score of less than 10 the unit will be unreliable.

How to programme contact numbers

After inserting your simcard into the Auto-Dialer turn the unit on and wait until you see the **green** ready LED is on. This will indicate that you have a mobile signal and the unit is ready for use.

You will now need to send a text with the contact number (**maximum 3 contact numbers**)

Note - To avoid confusion we have colour coded the hash (#) and the equals (=) symbols.

Example: (hash) (1 or 2 or 3) (equals) (phone number) (hash)

#1=01234567890#	then send this as a text to the simcard number of your unit
#2=07123456789#	then send this as a text to the simcard number of your unit
#3=07712345678#	then send this as a text to the simcard number of your unit

If you wish to cancel a number follow this example

Example: (hash) (1 or 2 or 3) (equals) (DELETE) (hash)

#1=DELETE# Then send this as a text to the simcard number of your unit

NOTE

Please send one message at a time and wait for the Auto Dialler to send you back the text acknowledgement 'NUMBER STORED' before you try to add another number.

Below is a notepad to help you remember the numbers that you have saved to your unit in the event you need to modify or delete in the future.

#1=	_____	#
#2=	_____	#
#3=	_____	#

How to program the SMS text message

You can now change the alarm message for both inputs to one of your own choosing.

To change the message send the text command as follows.

#MESS1= YOUR MESSAGE# Changes the message for input 1

#MESS2= YOUR MESSAGE# Changes the message for input 2

This will change the message to **“YOUR MESSAGE”**

The default message is input 1 or input 2

NOTE

You can only use a maximum of 19 characters including spaces for your customised message.

Telephone call alerts

The auto dialler can be programmed to send you a telephone call after each text alarm has been sent.

You will receive approximately three ring tones. The unit will then hang up automatically. This is to prevent call charges being incurred.

To set call alerts to ON please send the text message

#CALL=ON#

The unit will reply back “call on”

To disarm call alerts please send the text message.

#CALL=OFF#

If the call function has been set to ON you will receive a text message and shortly after a phone call.

How to Use the 3G GSM Auto Dialler

The 3G Auto Dialler has a 2 input relays linked to 3 terminal connections.

Input 1 = Terminal 1

Input is triggered by being pulled to ground (common) for at least one second

Input 2 = Terminal 1 or Terminal 2

Input 2 can be negatively triggered via terminal 2 or positively triggered by terminal 3

When the inputs are triggered the **green** ready led will flash 6 times to indicate that a signal has been received and it will send a text / call message to the saved user numbers.

Input 1 and Input 2 can both be triggered independently. The unit will monitor both inputs and not be locked out when one input has been triggered.

How to Use the Relay Output

The 3G Auto Dialler has a relay output which can be used to switch on external electric devices such as lighting, sirens etc.

Relay 1 is independent and can be activated by sms (text) message.

By texting the unit you can turn relay ON or OFF individually. Below are examples on how to do this.

#REL=ON# - This will turn on relay output
#REL=OFF# - This will turn off relay output

After each operation the unit will reply with a status report **REL ON/OFF**

Alarm Relay Mode

The relay can also be setup to pulse for between 20 to 30 seconds when the inputs have been triggered. To activate this mode you need to set dipswitch 2 to the ON position.

If the dipswitch is set to the OFF position, the relay will only come on via the SMS text commands.

Please note that if you use relay alarm mode to ON and are also using the relay independently it could become conflicted. Ideally you should use one or the other.

Quick Reference

Send Text	Operation	Acknowledgment
#REL=OFF#	Turn Relay Output Off	Relay Off
#REL=ON#	Turn Relay Output On	Relay On
#MESS1=MAX19CHARACTER#	Stores a custom message for input 1	Message 1 Stored
#MESS2=MAX19CHARACTER#	Stores a custom message for input 2	Message 2 Stored
#SIGNAL#	Gives a Signal Strength Test	Score of 1-30
#1=NUMBER#	Saves Contact Number 1	Number Stored
#2=NUMBER#	Saves Contact Number 2	Number Stored
#3=NUMBER#	Saves Contact Number 3	Number Stored
#1=DELETE#	Deletes Contact Number 1	Number Deleted
#2=DELETE#	Deletes Contact Number 2	Number Deleted
#3=DELETE#	Deletes Contact Number 3	Number Deleted
#CALL=ON#	Switches Text & Call Alerts on	Call on
#CALL=OFF#	Text Alerts Only	Call off

Dipswitch settings


Dipswitch 1 = ON = 3G Selected
 OFF = 2G Selected

Dipswitch 2 = Alarm Relay Mode ON
 Alarm Relay Mode OFF

Typical Application of Product

- Security alarm system applications
- Supervision and monitoring alarm systems
- Automatic monitoring system
- Vending machines security protection
- Pumping stations; tanks, oil or water levels
- Buildings and real estate
- Weather stations
- River monitoring and flood control
- Fridges/Fish Tanks
- Farming equipment and security

Please make sure you supply a 9 - 24 volts DC from the battery terminals via a 2 amp fuse (for alarm panel installations)

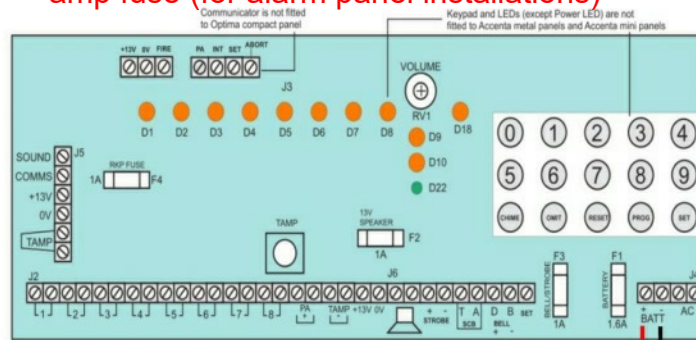

Typical alarm panel



Input 1 - Terminal 1 negative triggered

Input 2 - Terminal 2 negative triggered

Input 2 - Terminal 3 positive triggered



INPUT 1+2

As you can see in the circuit diagram above the inputs are relays and can be activated by pulling the input 1 & 2 to ground. Alternatively input 2 only can be positively triggered by using terminal 3.

Relay Output

The relay has Common, Normally Open and Normally Closed contacts which are capable of 10 Amp loads. This is suitable for turning ON or OFF electrical equipment. Alternatively it can be used for resetting your alarm system.

The relay can be manually activated by text message commands or it can be set to pulse for 30 seconds when an input has been activated - refer to page 6

For more technical support please browse the FAQ's on our website **www.gsm-activate.co.uk**
Alternatively email our technical support team at **technical@gsm-activate.co.uk** and we
will do our best to reply within 24 hours Monday - Friday.